



Revised: 4/25/94
Security: Everyone

=====

TOPIC -----

DISCUSSION -----

Interface:

		1	2	3	4	5	6	7			1	2	3	4	5	6	7
	ON				X		X	X		ON	X				X		
SW1										SW2							
	OFF	X	X	X		X				OFF		X	X	X		X	X
		1	2	3	4	5	6	7			1	2	3	4	5	6	7

Cables:

Printer Settings*:

```

      8 7 6 5 4 3 2 1
SW 1:      X X
      X X      X X X X
                   OPEN

```

```
SW 2:      4 3 2 1
           X X
           X X
           OPEN
```

Apple III and III+:

Interface:

Use .Printer Driver and set first byte in Device Configuration Block to 0E and use printer switch settings A.(9600 Baud) Or leave the settings in the Device Configuration Block at the Default values and use printer settings B. (1200 Baud)

Cables:

Modem Eliminator 590-0029
Straight Through Cable 590-0037

Printer Settings*:

A & B SETTING

```
      8 7 6 5 4 3 2 1
SW 1:      X X
      X X      X X X X
           OPEN
```

A SETTING

```
SW 2:      4 3 2 1
           X X
           X X
           OPEN
```

B SETTING:

```
SW 2:      4 3 2 1
           X
           X X X
           OPEN
```

Macintosh:

Cables:

Accessory Kit Cable 590-0169

Printer Settings*:

```
      8 7 6 5 4 3 2 1
SW 1:      X
      X X      X X X X X
           OPEN
```

```
SW 2:      4 3 2 1
           X X
```

X X
OPEN

To Build your own cable:

Mac	1	3	5	7	9
Printer	1	7	3	20	2

Lisa:

Cables:

Modem Eliminator 590-0029
Straight Through Cable 590-0037

Printer Settings*:

	8	7	6	5	4	3	2	1
SW 1:			X	X				
	X	X			X	X	X	X
								OPEN
SW 2:				4	3	2	1	
						X	X	
				X	X			
								OPEN

Make sure the preferences are set. Power off the Lisa so they are saved.

* The diagrams of these switches are presented as seen from the front of the Imagewriter I printer. The switches are toggle switches; X marks the toggle.

Article Change History:

25 April 1994 - Corrected Macintosh settings.

Support Information Services

Copyright 1987-1994, Apple Computer, Inc

Tech Info Library Article Number:194