



Tech Info Library

LisaDraw: Error 3001 or 3007

Revised: 7/30/87
Security: Everyone

LisaDraw: Error 3001 or 3007

=====

When printing a document, you might receive error message 3001 or 3007 as a result of having entered some text in your document then backspacing over a portion of it.

The BACKSPACE sometimes changes the type style of the text string to the system font, the font used for displaying Lisa menus and messages. Unfortunately, LisaDraw doesn't know how to print the system font.

The text typically displays normally, though it is sometimes displayed in the system font which is easily distinguished when the text contains a "V". Just compare the "V" with the V in the option Save from the File/Print menu. The system font V, just as in the pull down menus, slants towards the right.

The easiest way to resolve this problem is to "Select All" of the document with the Edit menu, change the type style to another type style. Change the typstyle back to what you originally selected if you wish. Then print as you normally would.

The other option is to locate, select and change the font of, or re-enter, the specific offending text. Look for the "V"s as described above, or select Print While You Wait. LisaDraw stops printing when it encounters the offending text string.

Tech Info Library Article Number:389