



Tech Info Library

Apple Color Plotter: Configuration Table

Revised: 4/30/90
Security: Everyone

Apple Color Plotter: Configuration Table

=====

This article last reviewed: 5 April 1990

System	SW-1	Cable Required
	12345678	
Apple III	10111100	590-0037 and 590-0166
Apple II GS		590-0037 and 590-0550
Macintosh	01111111	590-0169 *
Lisa	N/A	N/A
Apple IIc	01101100	590-0191 **
Super Serial ***	01101100	590-0037
High Speed Serial	N/A	N/A

Key

0 = off = closed

1 = on = open

* - A special plotter driver is necessary for the Macintosh.

The switch setting here is from an interface package for the Macintosh, "Plot-It" from Mesa Graphics, which works with MacPaint.

** - Using default port settings

*** - Apple II, II+, IIe require the Super Serial card

Apple III Driver Configuration:

Driver	Data Configuration Block											
-----	-----											
	0	1	2	3	4	5	6	7	8	9	A	B
RS-232	08	22	00	00	00	00	13	11	DF	84	50	80
Printer	08	22	00	00	00							

Super Serial Card Configuration:

..TIL01055-Apple_Color_Plotter-Configuration_Table.pdf

	1	2	3	4	5	6	7
SW1	Off	Off	Off	On	Off	On	On
SW2	On	Off	Off	On	Off	Off	Off

Jumper block should be pointing towards terminal.

Copyright 1990 Apple Computer, Inc.

Tech Info Library Article Number:1055