



Tech Info Library

Scribe Printer: Apple IIC Manual Errata (030-0993-A) (3 of 3)

Revised: 10/17/94
Security: Everyone

Scribe Printer: Apple IIC Manual Errata (030-0993-A) (3 of 3)

Page 60:

Table 2-3 Alternate (National) Language Characters, Draft Mode

Language

American	#	@	[	\	]	`	{		}	~
British	Lbs.	@	[	\	]	`	{		}	~
German	#	sect.	A-um.	O-um.	U-um.	`	a-um.	o-um.	u-um.	Essatz
French	Lbs.	a-ag.	o.	c-c.	sect.	`	e-aa.	u-ag.	e-ag.	um.
Swedish	#	@	A-um.	O-um.	A-o.	`	a-um.	o-um.	a-o.	~
Italian	Lbs.	sect.	o.	c-c.	e-aa.	u-ag.	a-ag.	o-ag.	e-ag.	i-ag.
Spanish	Lbs.	sect.	!-inv.	N-~	?-inv.	`	o.	n-~	c-c.	~
	\$23	\$40	\$5B	\$5C	\$5D	\$60	\$7B	\$7C	\$7D	\$7E

KEY:

aa. = accent aigu (goes above letter)
ag. = accent grave (goes above letter)
c. = cedilla (goes below letter)
Essatz = German double-s elision
o. = diacritical small o (goes above letter)
Lbs. = pounds sterling
sect. = section sign
um. = umlaut (goes above letter)
~ = tilde (goes above letter)
?-inv. = Inverted question mark
!-inv. = Inverted exclamation point

In this table, the top line shows the American characters. The other lines give the alternate character groups that can be substituted for these characters by using the appropriate control codes. DIP switches SW1, SW2 and SW3 specify the selected character group.

Note: The "\$" (Hex 24) and "^" (Hex 5E) are part of the standard font in all languages. For the Spanish hyphen, use the single-quote key "'" (hex

27), which is also the same for all languages.

Table 2-4 shows the control codes and combinations of positions of the three DIP switches to select the desired alternate character group. Note that there are two different sets of DIP switch settings and two different control codes that produce American symbols; you can use either one, since the effects of both are the same.

Table 2-4. Alternate (National) Character Set Codes

Language		DIP Switches			
Font	Code	SW1	SW2	SW3	
American	ESC Z CTL-G CTL-@	Off (Up)	Off (Up)	Off (Up)	
German	ESC Z CTL-C CTL-@ ESC D CTL-D CTL-@	Off (Up)	Off (Up)	On (Down)	
American	ESC Z CTL-E CTL-@ ESC D CTL-B CTL-@	Off (Up)	On (Down)	Off (Up)	
French	ESC Z CTL-A CTL-@ ESC D CTL-F CTL-@	Off (Up)	On (Down)	On (Down)	
Italian	ESC Z CTL-F CTL-@ ESC D CTL-A CTL-@	On (Down)	Off (Up)	Off (Up)	
Swedish	ESC Z CTL-B CTL-@ ESC D CTL-E CTL-@	On (Down)	Off (Up)	On (Down)	
British	ESC Z CTL-D CTL-@ ESC D CTL-C CTL-@	On (Down)	On (Down)	Off (Up)	
Spanish	ESC D CTL-G CTL-@	On (Down)	On (Down)	On (Down)	

Copyright 1985 Apple Computer, Inc.

Tech Info Library Article Number:1066