



Tech Info Library

Applesoft under ProDOS: Turn 80 columns off before slot commands

Revised: 3/4/85
Security: Everyone

Applesoft under ProDOS: Turn 80 columns off before slot commands

=====

When you use Applesoft under ProDOS, you must turn off the 80-column firmware before issuing any slot command; failing to do so essentially hangs the system. You can turn off the 80-column firmware with ESC CTRL-Q in immediate mode or with `PRINT CHR$(12);CHR$(21)` from deferred mode.

Apple Technical Communications

Tech Info Library Article Number:1091