

Tech Info Library

Super Serial Card: Configuring for ImageWriter I (11/96)

Revised: 11/26/96 Security: Everyone

Super Serial Card: Configuring for ImageWriter I (11/96)

Article Created: 08 April 1985

Article Reviewed/Updated: 26 November 1996

TOPIC -----

The following describes the connection between the Super Serial Card and the 10-inch and 15-inch Imagewriters.

DISCUSSION -----

Install the Super Serial Card into slot 1, which is the left most slot when facing the front of the computer. If slot 1 is occupied, any other slot except AUX is usable.

On the Super Serial Card there is a removable block of pins with a triangle on its top face. Make sure this jumper block is plugged into its socket so that the triangle points to the word TERMINAL printed on the card.

This configuration, called modem elimination, compensates for the standard RS-232-C pin assignments so that the internal cable of the SSC can transmit signals to the Imagewriter through the appropriate pins.

SSC Switch Settings

Switch 1

- * 9600 baud (1-4)
- * Printer Mode (5-6)
- * Normal Clear To Send (7)

..TIL01121-Super_Serial_Card-Configuring_for_ImageWriter_I_11-96.pdf

```
Switch 2
_____
* 8 data bits and 1 stop bit (1)
* No delay after CR (2)
* Video off (3)
* 132 character line (4)
* Auto-LF after CR (5)
* Disabled ACIA-CPU interrupts (6)
* Normal Clear To Send (7).
* No parity is set automatically in the Printer Mode.
Cable pinout
_____
Super Serial Card (SSC)
                         Pin
                                  Cable
                                        Pin
                                                 Imagewriter Connector
Frame Ground ..... (FG)..... 1
                                        <--->
                                                 1....(FG)
Transmit Data
                        (Tx) .... 2
                                        <--->
                                                  2....(Tx)
Receive Data
                       (Rx) \dots 3
                                        <--->
                                                  3....(Rx)
                        (RTS) .... 4
                                                  4....(RTS)
Request to send
                                        <--->
Clear To Send
                        (CTS) .... 5
                        (DSR) .... 6
Data Set Ready
Signal Ground ...... (SG)..... 7
                                        <--->
                                                  7....(SG)
                       (DCD) .... 8
Data Carrier Detect
Secondary Clear To Send (SCTS) ... 19
Data Terminal Ready (DTR) .... 20
                                                  20....(DTR)
                                       <--->
Imagewriter Switch Settings
SW1: 8 7 6 5 4 3 2 1
                          SW2: 4 3 2 1
     | | | x | x |
                                        (CLOSED)
     |X|X| | |X|X|X|X|
                              | X | X | | |
                                         (OPEN)
Switch 1
* U.S. character set (SW1: 1-3)
* 66-line page length (4)
* Ignored 8th bit (5)
* Elite pitch (6-7)
* Auto-LF after CR (8)
Switch 2
_____
* 9600 baud (SW2: 1-2)
* DTR data protocol (3)
* Unknown (4).
```

..TIL01121-Super_Serial_Card-Configuring_for_ImageWriter_I_11-96.pdf

To verify the connection, turn on the computer, video monitor, Imagewriter and wait for the Applesoft prompt,], to appear on the monitor screen. Then type these two lines, ending each line with a carriage return:

PR#1 (if the card is in slot 1) This is a test

The Imagewriter should print "This is a test" and an Applesoft syntax error message (the error message means nothing during this test). However, if the printer does not print, recheck all connections, switch settings and retype the two test lines.

Article Change History:
26 Nov 1996 - Reviewed for technical accuracy, revised formatting.

Copyright 1985-96, Apple Computer, Inc.

Tech Info Library Article Number:1121