



Tech Info Library

Configuring the ImageWriter to the Apple IIfc

Revised: 8/10/87
Security: Everyone

Configuring the ImageWriter to the Apple IIfc

=====

Both Imagewriters are shipped with their switch settings configured to work on the Apple IIfc.

To work with the Apple IIfc, the Imagewriter's switch settings should be:

```
SW1: 8 7 6 5 4 3 2 1
      | | | | |X|X| | | CLOSED
      |X|X|X|X| | |X|X| OPEN
```

Switch 5 of SW1 may be open when the Imagewriter is shipped)

```
SW2:      4 3 2 1
          | | |X|X| CLOSED
          |X|X| | | OPEN
```

The position of SW2's switch 4 doesn't matter, since it's unused.

Tech Info Library Article Number:1153