



Tech Info Library

ImageWriter PROBLEM/CURE: No Select Light

Revised: 1/30/92
Security: Everyone

ImageWriter PROBLEM/CURE: No Select Light

=====

This article last reviewed: 28 April 1988

BEFORE YOU START: Familiarize yourself with the ImageWriter Technical Procedures. Be sure to follow proper ESD procedures.

#1 - PROBLEM DESCRIPTION: When powered on the ImageWriter SEL lamp does not come on.

CAUSE: The magnetic cover interlock may be malfunctioning.

CURE: Check the magnet on the cover and the switch in the printer body to see that they are installed securely and aligned properly. If they are, replace the switch.

#2 - PROBLEM DESCRIPTION: The ImageWriter prints one line, returns to the left margin and the printer deselects. If the Select switch is pressed the printer prints another line, returns to the left and the printer deselects again.

CURE: The right margin switch is causing this problem. Replace the right margin switch.

If the problem is still not found, search on ImageWriter General Troubleshooting.

Copyright 1988 Apple Computer, Inc.

Tech Info Library Article Number:1385