



Tech Info Library

Monitor II P/C: No Display, Faint Display or Fuzzy Display

Revised: 1/29/92
Security: Everyone

Monitor II P/C: No Display, Faint Display or Fuzzy Display

=====

This article last reviewed: 29 April 1988

PROBLEM DESCRIPTION: After the Monitor II has had a chance to warm up, there is no display or faint display or fuzzy display.

WARNING: Turn off the Monitor II and unplug it whenever the case must be removed for the procedure below.

CAUSE: 1. The video connector is either not plugged in all the way or the video jack may be cracked.
2. The regulator is plugged in upside down or cracked.

CURE: 1. Plug video cable into the jack all the way and make sure the connector is not broken and fits snugly.
2. Replace regulator. Be sure to use heat sink compound before tightening it down.

If the above cure doesn't solve your problem, refer to the Tech Procedures to obtain the general troubleshooting procedure for this product.

Copyright 1988 Apple Computer, Inc.

Tech Info Library Article Number:1610