



# Tech Info Library

## Macintosh Plus: Using the AppleTalk DB-9 connection module

Revised: 7/16/92  
Security: Everyone

Macintosh Plus: Using the AppleTalk DB-9 connection module

=====

Article Created: 19 February 1986  
Article Last Reviewed: 2 July 1992  
Article Last Updated:

To use the DB-9 AppleTalk connection module (used with Macintosh 128K and 512K models) with the Macintosh Plus you will need to either use the Apple DB-9 to circular 8 adapter cable (part 590-0553 or 590-0341) or make an adapter cable with the following pinouts.

Macintosh Plus: Circular 8 to DB-9 Adapter Pinouts

Circular 8	Signal	DB-9
1	HSKo (+12V)	6
2	HSKi	7
3	TXD-	5
4	GND	3*
5	RXD-	9
6	TXD+	4
7	No Wire	
8	RXD+	8
	GND	1*

\* Pins 1 and 3 on the DB-9 end are jumpered together.

The pins on the male end of the circular 8 connector are numbered as shown:

6 7 8  
3 4 5  
1 2

The pin assignments for the DB-9 connector on the AppleTalk connection module are as follows:

Signal Name	Pins
	DB-9

RXD+	8
TXD+	4
RXD-	9
TXD-	5
Case ground	DO NOT DIRECT CONNECT CASE GROUND TO CABLE SHEILD.

The case ground signal goes from the connector module shell through a ground isolation network in the connector module to the shield of the cable. The ground isolation network isolates grounds and helps prevent ground currents. No further case grounding should be made.

Copyright 1986, 1992, Apple Computer, Inc.

Tech Info Library Article Number:1760