



Tech Info Library

AppleWorks IIe: Connecting it to a Diablo 620 API printer

Revised: 3/3/86
Security: Everyone

AppleWorks IIe: Connecting it to a Diablo 620 API printer

=====

A. Apple IIe

1. Super Serial Interface Card settings

	1	2	3	4	5	6	7		1	2	3	4	5	6	7
ON		X	X	X		X	X	ON	X	X					X
SW1								SW2							
OFF	X				X			OFF		X	X	X	X		
	1	2	3	4	5	6	7		1	2	3	4	5	6	7

-- Jumper block points to TERMINAL

2. AppleWorks settings

- Carriage: 11"
- Linefeed after carriage return: YES
- Underlining: The Diablo 620 API makes an underlines by printing the character, backspacing one character, and printing the underline.
- Special Codes

-- Check the printer manual.

	Begin	End
1. Boldface:	Esc W	Esc &
2. Underline:	Esc R	Esc R
3. Superscript:	Esc U	Esc D
4. Subscript:	Esc D	Esc U

5. Proportional Spacing 1: Esc P Esc Q

B. Cabling

Super Serial Interface Card	Diablo 620
DB-25	DB-25
2	2
3	3
6	6
7	7
20	20

C. Diablo 620

1. Switch settings

- 1 - On
- 2 - Off
- 3 - Off
- 4 - On
- 5 - Off
- 6 - Off
- 7 - Off
- 8 - On

-- 1200 baud, no parity, 8 data bits, 1 stop bit

Apple Technical Communications

Tech Info Library Article Number:1782