



Tech Info Library

AppleWorks IIe: Connecting a NEC 3510 letter quality printer

Revised: 3/3/86
Security: Everyone

AppleWorks IIe: Connecting a NEC 3510 letter quality printer

=====

A. Apple IIe

1. Super Serial Interface Card settings:

	1	2	3	4	5	6	7		1	2	3	4	5	6	7
ON				X		X	X	ON	X	X					X
SW1								SW2							
OFF	X	X	X		X			OFF			X	X	X	X	
	1	2	3	4	5	6	7		1	2	3	4	5	6	7

-- Jumper block points to TERMINAL

2. AppleWorks settings

- Carriage: 11"
- Linefeed after carriage return: YES
- Underlining: The NEC 3510 LQP makes an underlines by printing the character, backspacing one character, and printing the underline.
- Special Codes

-- Check the printer manual.

	Begin	End
1. Boldface:	Esc *	Carriage Return
2. Underline:	Esc -	Esc '
3. Superscript:	Esc ;	Esc :
4. Subscript:	Esc :	Esc ;

5. Proportional Spacing 1: Esc H Esc I

B. Cabling

Super Serial Interface Card		NEC 3510
DB-25		DB-25
2		2
3		3
7		7
19		19

C. NEC 3510

1. Switch settings

a. Front panel

- 1 - Off
- 2 - Off
- 3 - On
- 4 - Off
- 5 - On
- 6 - Off
- 7 - Off
- 8 - Off

b. Back panel

- 1 - Off
- 2 - Off
- 3 - Off
- 4 - Off

-- 9600 baud, no parity, 8 data bits, 1 stop bit

Apple Technical Communications

Tech Info Library Article Number:1783