



Tech Info Library

Apple IIGS Workstation Software: New Product Information

Revised: 5/25/89
Security: Everyone

Apple IIGS Workstation Software: New Product Information

=====

This article last reviewed: 1 March 1988

Overview

Apple IIGS Workstation Software lets you connect an Apple IIGS to a LocalTalk network. This software performs the same function as the Apple II Workstation Card for the Apple IIe. The software makes it possible to start up from an AppleShare File Server 2.0 and run an Apple IIGS without disk drives attached.

The only additional hardware needed is an Apple IIGS Memory Expansion Card containing at least 512K of RAM, and a LocalTalk System Connector Kit.

Apple IIGS Setup

Before you can use the Apple IIGS on the AppleTalk Network System, you must configure the system correctly.

From the Control Panel (accessed via Open Apple-Control-Esc):

1. Be sure the Maximum RAM Disk Size is at least 256K less than the Largest Selectable. For example, if the Largest Selectable is 1024K, then set the Maximum RAM Disk Size to 768K or less. The default value of 0K is best if you plan to run any Apple IIGS specific programs.

Control Panel	
RAM Disk	
X Minimum RAM Disk Size:	0K
X Maximum RAM Disk Size:	0K
-Largest Selectable	1024K-
-RAM Status-	

RAM Disk Size:	0K
Total Ram in Use:	84K
Total Free RAM:	1195K

(The numbers following Total RAM in Use and Total Free RAM will vary, depending on phase of startup process.)

2. Set Slot 1 or Slot 2 to "Your Card" (Slot 1 is recommended).

- If slot 1 = "Your Card", plug LocalTalk connector into the Printer Port.
- If slot 2 = "Your Card", plug LocalTalk connector into the Modem Port.

3. Set Slot 7 to "Built In AppleTalk"

4. Set Startup to Slot 7

Control Panel
Slots
Slot 1: Your Card
X Slot 2: Modem Port
X Slot 3: Built-in Text Display
X Slot 4: Mouse Port
X Slot 5: Smart Port
X Slot 6: Disk Port
Slot 7: Built-in AppleTalk
Startup Slot: 7

5. Exit the Control Panel. If you had to change the RAM Disk settings, you must POWER DOWN (with the power switch). This will reset the RAM Disk to the setting you have selected. It does not change RAM disk values until power down. This way, you can restart without loss of RAM Disk contents.