



# Tech Info Library

## ImageWriter LQ: List Of Escape Codes Used For Switching Bins

Revised: 9/6/88  
Security: Everyone

ImageWriter LQ: List Of Escape Codes Used For Switching Bins

=====

This article last reviewed: 25 August 1988

Here are the escape codes needed to switch between bins on an ImageWriter LQ:

(NOTE: The 'Select Bin X' codes select bins only; they do not cause paper feeding.)

Function	Keystrokes	ASCII Code
Select Bin 1	Esc @ 0	27 64 48
Select Bin 2	Esc @ 1	27 64 49
Select Bin 3	Esc @ 2	27 64 50
Feed to Top of Form	Control-L	12
Set Top of Form	Esc v	27 118

Copyright 1988 Apple Computer, Inc.

Tech Info Library Article Number:3209