



Tech Info Library

LaserWriter: How To Use Preprinted Letterhead

Revised: 12/6/89
Security: Everyone

LaserWriter: How To Use Preprinted Letterhead

=====

This article last reviewed: 18 April 1989

Apple has no documented specifications for paper or ink requirements when working with preprinted letterhead and logos, beyond the information in the "LaserWriter II Owner's Guide". Below is a copy of this specification.

"16-lb. to 20-lb. photocopy or typewriter bond (60 to 80 g/m2) in normal mode; up to 36-lb. (135 g/m2) stock in manual mode with face-up tray open. Accepts most letterhead and colored stock. Accepts medium-weight photocopy transparencies. Envelopes can be printed with manual feed or from the envelope cassette. Labels can be printed using manual feed."

However, any paper or ink used with the LaserWriter must be able to withstand the temperature of the fuser roller. This temperature varies between 165 and 180 degrees centigrade. It takes an 8.5-inch by 11-inch piece of paper approximately 5.8 seconds to travel over the fuser roller or approximately 1.5 inches per second.

Copyright 1989 Apple Computer, Inc.

Tech Info Library Article Number:3853