



Tech Info Library

LaserWriter IINTX: LaserJet Emulation and Landscape Problem

Revised: 9/22/89
Security: Everyone

LaserWriter IINTX: LaserJet Emulation and Landscape Problem

=====

This article last reviewed: 7 September 1989

TOPIC -----

I am printing in Landscape rather than Portrait mode to a LaserWriter IINTX in LaserJet emulation mode.

I am using a PC-clone and driving the printer from dBASE III+. All the HP command codes I send to our printer work except the code for Landscape mode. When I send this, nothing happens.

The code being used is:

```
CHR(27)+"&10"
```

I have tried using a zero instead of letter O and also put a CHR(13) at the end of the command, and it still does not work.

DISCUSSION -----

It appears that you should be using a different escape sequence. According to our documentation, you should try the following:

in decimal:
`chr(27)+chr(38)+chr(108)+chr(49)+chr(79)`

in ASCII:
`esc "&l10"`

Substituting the 49 with a 48 should put you back in Portrait mode.

Copyright 1989 Apple Computer, Inc.

Tech Info Library Article Number:4383