



Tech Info Library

Macintosh Portable: Sound Volume Problem Solved

Revised: 7/27/92
Security: Everyone

Macintosh Portable: Sound Volume Problem Solved

=====

Article Created: 19 November 1989
Article Last Reviewed: 27 July 1992
Article Last Updated:

TOPIC -----

I am having a problem controlling the volume on the internal speaker of our Macintosh Portable. Most of the time, the speaker is barely audible -- even though the volume control in both the General and Sound CDEVs is at 7.

I cleared PRAM by using the keyboard method (Control, Shift, Option, and Command). This procedure worked, but it raises a couple of questions:

- 1) What is causing the speaker volume to become so low?
- 2) Why does resetting the PRAM fix the problem, whereas removing the power supply via the battery removal/power-down sequence does not fix the problem?

DISCUSSION -----

- 1) The volume on your Macintosh Portable was low because the PRAM was getting scrambled.
- 2) To clear PRAM on the Macintosh Portable, both batteries must be removed for an undefined period of time -- probably more than 10 minutes. Otherwise, the 9-volt battery holds the values stored in PRAM. The easiest way to clear this memory is, as you discovered, by keyboard command.

Copyright 1989 Apple Computer, Inc.

Tech Info Library Article Number:4707