



Tech Info Library

Macintosh: How System Heap Size Is Allocated (11/94)

Revised: 11/28/94
Security: Everyone

Macintosh: How System Heap Size Is Allocated (11/94)

=====

Article Created: 10 September 1990
Article Reviewed/Updated: 28 November 1994

TOPIC -----

- 1) Where is the heap size stored on a volume?
- 2) If I adjust a heap size on a volume and copy that System Folder to another empty drive, will the boot blocks be set to the new modified size?

DISCUSSION -----

The default heap size is stored in the boot blocks of a startup volume. For System Software 6.0.4 and System Software 6.0.5, the default size 128K.

Note: When the System Software 6.0.5 System Tools disk is booted on a Macintosh SE with 1MB RAM, the System heap takes up 188K of RAM. The default System heap size is used as a guideline; the heap size is increased, if necessary.

The boot blocks, including the default heap size, are taken from the source disk, unless that disk does not have a valid copy of the boot blocks or if it is a file server. In these cases, the boot blocks are taken from the "boot" resource in the System file being copied.

Article Change History:
28 Nov 1994 - Reviewed for technical accuracy.

Support Information Services

Copyright 1990-94, Apple Computer, Inc.

Tech Info Library Article Number:6130