

## Tech Info Library

## A/UX: Configuring the Kernel for an NFS Server (9/94)

Security: Everyone
A/UX: Configuring the Kernel for an NFS Server (9/94)
Article Created: 12 October 1990 Article Reviewed/Updated: 1 September 1994
COPIC
How do I install NFS (configure the kernel) for an NFS server?
DISCUSSION
If you are using A/UX 2.0 or 3.0, bring the system to single-user mode and type the command: $\frac{1}{2}$
newconfig nfs
Then, follow the steps below:
1) Edit /etc/exports to specify hosts eligible to mount file systems from this server. In this file, you will specify what partitions you will allow to be mounted and what systems may be mounted.
For example: to let anyone on the system "hostnamel" mount a file partition named "/ul", you would enter the line to /etc/exports:
/ul hostname1
2) Check that a file system has been exported to this system; enter the command-line: showmount -e
The output should look similar to the following:
/ hostname1 /users hostname1 hostname2

## ..TIL06271-A-UX-Configuring\_the\_Kernel\_for\_an\_NFS\_Server\_9-94\_(TA44838).pdf

```
Article Change History:
```

1 Sept 1994 - Reviewed. Removed A/UX 1.0 information.

31 Aug 1992 - REVIEWED for technical accuracy. Included A/UX 3.0 information.

Support Information Services

Copyright 1990-94 Apple Computer, Inc.

Tech Info Library Article Number:6271