



Tech Info Library

StyleWriter: Clear the Ink Cartridge When Installing a New One

Revised: 8/8/91
Security: Everyone

StyleWriter: Clear the Ink Cartridge When Installing a New One

=====

Article Created: 1 May 1991
Article Last Reviewed:
Article Last Updated:

TOPIC -----

When installing a new ink cartridge in the StyleWriter printer, you must clear the cartridge. This process, which takes several seconds, is detailed in the StyleWriter User's Manual:

DISCUSSION -----

Here's how to do it:

- 1) Turn the StyleWriter's Power Switch off.
- 2) Press the Ready switch (located on the left) and hold.
- 3) Press the Power switch (located on the right) and release both switches simultaneously.

Do all this twice. You may hear some whirring and clicking sounds as the cartridge is cleaned, but consider it a normal part of the process.

Copyright 1991 Apple Computer, Inc.

Tech Info Library Article Number:7477