



Tech Info Library

ImageWriter LQ: Printing on Entire Ribbon

Revised: 8/9/91
Security: Everyone

ImageWriter LQ: Printing on Entire Ribbon

=====

Article Created: 4 April 1991
Article Last Reviewed:
Article Last Updated:

TOPIC -----

I have an Apple ImageWriter LQ printer that prints only on the top portion of the black ribbon. According to the manual, the ribbon assembly should shift up and down for an even use of the black ribbon. When the printer is first turned on, the ribbon mechanism shifts down and stays there.

I discovered that when the ribbon is not in the printer, the assembly does shift. When should the shift occur with a black ribbon? What triggers the shift?

DISCUSSION -----

The ImageWriter LQ with the 2.0 driver prints on all four bands of the ribbon on multi-page documents; it should use all bands equally. It moves up through the different bands on each page, so if you print multiple one-page documents, it may stay on the top band. Make sure that you do not turn off the printer between print jobs. This resets the ribbon to the top band.

Copyright 1991 Apple Computer, Inc.

Tech Info Library Article Number:7556