



Tech Info Library

AppleShare: Can't Have A Wild Card Volume Name

Revised: 9/18/91
Security: Everyone

AppleShare: Can't Have A "Wild Card" Volume Name

=====

Article Created: 13 August 1991
Article Last Reviewed:
Article Last Updated:

TOPIC -----

I have a series of Macintosh Laboratories that are set up to use a single, "Campus Standard Startup disk". This disk is a floppy that students can take to any lab on campus, insert into a Macintosh, turn on the machine and have the server volume come up automatically.

All the servers have the name "Server" and there is an "*" in the AppleShare Prep file that I am told tells the Macintosh to look for the server in "the zone you are in". In the past, when a new lab has been brought up, we have just added the new server volume name to a list in the prep file. This is not working any more.

Is there any way we can get the format of the AppleShare Prep file? Or is there a way we can use the "*" to tell it to mount "whatever volume is on that server" like the "*" for zones?

DISCUSSION -----

It is not possible to use a wild card for the volume name. It would appear that you are changing something in the AppleShare Prep file that is being ignored.

This is the "includes" definition for the Boot Mount List (BMLS resource).

| | | | |
|----------------|-----|----------------|--|
| bmlFSElSize | EQU | 0 | ; size of this FSElement |
| bmlFSNumVols | EQU | bmlFSElSize+2 | ; number of volumes for this FSElement |
| bmlUAM | EQU | bmlFSNumVols+2 | ; UAM chosen value (1,2,3) |
| bmlFSSTStamp | EQU | bmlUAM+2 | ; server timestamp |
| bmlHasPassword | EQU | bmlFSSTStamp+4 | ; if zero then no password saved |

| | | | |
|----------------|-----|-------------------|-----------------------------|
| bmlFSPassword | EQU | bmlHasPassword+2 | ; server password |
| bmlFSUName | EQU | bmlFSPassword+8 | ; start of user name string |
| bmlFSSObjName | EQU | bmlFSUName+32 | ; server NBP object name |
| bmlFSSZoneName | EQU | bmlFSSObjName+33 | ; server NBP zone name |
| bmlFSVolInfo | EQU | bmlFSSZoneName+33 | ; start of volume info |

Copyright 1991 Apple Computer, Inc.

Tech Info Library Article Number:8633