



Tech Info Library

Apple IIGS: How To Set Slots for AppleShare

Revised: 9/26/91
Security: Everyone

Apple IIGS: How To Set Slots for AppleShare

=====

Article Created: 13 August 1991
Article Last Reviewed:
Article Last Updated:

TOPIC -----

I have an AppleShare network with a Macintosh SE server connected to Apple IIGS and Apple IIe computers.

One Apple IIGS has a SCSI hard drive. When I use this Apple IIGS on the network, I have its Control Panel slot settings to Startup Slot=Slot 7, and Slot 7 set for built-in AppleTalk.

I want to install AppleShare and the Apple IIGS Desktop/Finder to the hard drive and use it as a startup device so I can sign on to the server using the Control Panel. Since both AppleTalk and the hard drive seem to require slot 7, how can I use both at the same time?

DISCUSSION -----

The SCSI hard disk does not have to be in slot 7.

- If you want to start up from the hard drive, place the hard drive controller in slot 2 and set your startup slot to 2 in the Control Panel.
- If you want to start up over the network, leave the start-up slot as 7 and set slot 7 as AppleTalk.

Copyright 1991 Apple Computer, Inc.

Tech Info Library Article Number:8792