



Tech Info Library

LaserWriter Driver 8.x: Tray Switching Option (2/96)

Revised: 2/23/96
Security: Everyone

LaserWriter Driver 8.x: Tray Switching Option (2/96)

Article Created: 20 May 1993
Article Reviewed/Updated: 23 February 1996

TOPIC -----

I'm using the LaserWriter 8.x driver. When I choose "Print" from the File menu, a Print Options Dialog box appears. I get several choices, such as FinePrint, PhotoGrade and, TraySwitch. Can you explain "TraySwitch"?

DISCUSSION -----

The "TraySwitch" option allows the printer to automatically switch to the other paper trays when the current tray runs out of paper. Thus, between the 250-sheet paper cassette and the 100-sheet multipurpose tray of a LaserWriter Pro, you can print 350 sheets without having to reload paper.

Here are the settings you can select from the TraySwitch pop-up menu:

TraySwitch: Printer's Default
- does not change the current setting in the printer.
TraySwitch: True
- enables trayswitching
TraySwitch: False
- disables trayswitching

By the way, this option is only available if the printer you are using supports it.

Article Change History:
23 Feb 1996 - Corrected minor typographical errors.

Copyright 1993-96, Apple Computer, Inc.

Tech Info Library Article Number:12167