



Tech Info Library

LaserWriter Pro 630: No Tray Switching With Windows (3/94)

Revised: 3/21/94
Security: Everyone

LaserWriter Pro 630: No Tray Switching With Windows (3/94)

=====

Article Created: 21 March 1994

TOPIC -----

Is there a way to specify which tray to use for the first page, and a different tray for the remaining pages of the print job with a LaserWriter Pro 630 using Windows?

DISCUSSION -----

The ability to control tray selection for the "first" and "remaining" pages is a feature of PostScript level 2. The current Windows driver being distributed by Microsoft (PScript.drv v3.5x) is only a PostScript level 1 driver.

We believe Adobe sells a Windows version of their PS Printer driver which is a PostScript level 2 driver. You may want to verify with Adobe that their driver supports this specific feature you are looking for.

Support Information Services

Copyright 1994, Apple Computer, Inc.

Tech Info Library Article Number:14767