



Tech Info Library

LaserWriter Pro 600/630: Parallel Port Pinouts (5/94)

Revised: 5/11/94
Security: Everyone

LaserWriter Pro 600/630: Parallel Port Pinouts (5/94)

Article Created: 11 May 1994

TOPIC -----

What are the pinouts for the LaserWriter Pro 600/630 parallel port?

DISCUSSION -----

Pin #	Signal	Description
-----	-----	-----
1	/DATA STROBE	Strobe for input data, minimum pulse width is 1 µsecond
2	Data1	Data Input bit 1
3	Data2	Data Input bit 2
4	Data3	Data Input bit 3
5	Data4	Data Input bit 4
6	Data5	Data Input bit 5
7	Data6	Data Input bit 6
8	Data7	Data Input bit 7
9	Data8	Data Input bit 8
10	/ACKNOWLEDGE	Handshaking output signal; acknowledges receipt of data and indicates readiness to receive additional data.
11	BUSY	Busy output signal; indicates that a /DATA STROBE has been received, but that /ACKNOWLEDGE has not yet been given. Signal will be high when receive buffer is full or printer fault occurs.
12	PAPER ERROR	Output status signal. Indicates a paper error.
13	SELECT OUT	Not used in the LW Pro 600/630, daisy-chained printer select signal.
14	AUTO FEED	Not used in Postscript printers. Indicates that paper should be fed automatically.
15	SELECT IN	Not used in the LW Pro 600/630, daisy-chained printer select signal.
16	SIGNAL GND	Signal ground
17	CHASSIS GND	Chassis ground
18	Not used	Not used

19-30	SIGNAL GND	Signal ground
33-36	Not used	Not used

Support Information Services

Copyright 1994, Apple Computer, Inc.

Tech Info Library Article Number:15318