



Tech Info Library

MediaPlayer: CD Audio Missing from "Device" Menu (6/94)

Revised: 6/24/94
Security: Everyone

MediaPlayer: CD Audio Missing from "Device" Menu (6/94)

=====

Article Created: 22 Jun 1994

TOPIC -----

I have the PC Multimedia Upgrade Kit, and am having problems playing an audio CD. When trying to play an Audio CD from MediaPlayer the "CD Audio" option is not listed under the "Device" menu as it should be.

DISCUSSION -----

Try the following:

- 1) Go to "Drivers" Control Panel (double click "Control Panels" in "Main," double click "Drivers" in that window.
- 2) When "Drivers" is open, double click on "[mci]CDAudio"
- 3) You should get a message that says "One CD-ROM drive detected, CD Audio installed," or something similar.
- 4) You will now be able to access "CD Audio" from Media Player.

If the above does NOT work, then try the following:

- 1) Exit Windows
- 2) From the "c:\\" directory, type in:
edit c:\windows\mplayer.ini<cr>
- 3) Find the line that reads "CDAudio=x" (where "x" is some number)
- 4) Change the x to "17"
- 5) Save changes and exit (in "edit" you would hit alt-f, then "x", then hit return or enter)
- 6) return to Windows and double click on Media Player. CD Audio should now be listed.

Support Information Services

Copyright 1994, Apple Computer, Inc

Tech Info Library Article Number:15692