



Tech Info Library

LaserWriter 16/600 PS: Fuser Temperature (1/97)

Revised: 1/29/97
Security: Everyone

LaserWriter 16/600 PS: Fuser Temperature (1/97)

Article Created: 17 March 1995
Article Reviewed/Updated: 29 January 1997

TOPIC -----

What is the fuser temperature for the LaserWriter 16/600 PS?

DISCUSSION -----

The target fuser temperatures for the LaserWriter 16/600 PS are as follows:

	Normal Temp. Control	Initial Warm-Up Control
=====	=====	=====
NON-PRINTING		
Wait	175°C (347°F)	190°C (374°F)
Standby	175°C (347°F)	190°C (374°F)
Auto Delivery	175°C (347°F)	190°C (374°F)
Initial Rotation	175°C (347°F)	190°C (374°F)

PRINTING		

Long Interval Printing	195°C (383°F)	195°C (383°F)
Continuous Printing	200°C (392°F)	205°C (401°F)
Intermittent Printing	185°C (365°F)	195°C (383°F)
Envelopes (<25)	190°C (374°F)	190°C (374°F)
Envelopes (>25)	180°C (356°F)	190°C (374°F)
B5 Envelope	200°C (392°F)	205°C (401°F)
1st Print from MP Tray	195°C (383°F)	195°C (383°F)

The initial warm-up control is initiated for the first 5 minutes whenever the initial temperature detected by the thermistor is 50°C (122°F) or less to improve fusing.

The fuser is not kept warm whenever the printer is in the Energy Saver mode.

Article Change History:

29 Jan 1997 - Changed distribution status.

01 May 1995 - Corrected product name.

Copyright 1995-97, Apple Computer, Inc.

Tech Info Library Article Number:17381