



# Tech Info Library

## LaserWriter 16/600: Printing From UNIX, Troubleshooting (3/95)

Revised: 3/22/95  
Security: Everyone

LaserWriter 16/600: Printing From UNIX, Troubleshooting (3/95)

=====

Article Created: 22 March 1995

TOPIC -----

The files I send to my LaserWriter 16/600 PS are not being printed, or they are not being printed correctly. How can I correct this?

DISCUSSION -----

The first thing to check is the LaserWriter setup. UNIX administrators know how to set up the /etc/printcap file, but they assume the printer does not need configuration for text.

The LaserWriter 16/600 PS defaults to PostScript as the TCP/IP mode, however, PostScript cannot handle text files. PCL5 handles text files, so the TCP/IP mode should to be changed to PCL5. If PostScript is also expected from this printer, choose AutoSelect. Here are the instructions:

### Step 1

Move the configuration switch located above the Parallel port on the back of the printer to the up position.

### Step 2

Launch the Apple Printer Utility.

### Step 3

Open the Communication Configuration category.

### Step 4

Open the Up Switch Position category (Custom)

### Step 5

Set the TCP/IP mode to AutoSelect

### Step 6

Press the Send button

Also check the `/etc/printcap` file. Follow the example on page 125 of the "Apple LaserWriter 16/600 PS: Setting Up, Connecting, and Using Your Printer" manual that came with your LaserWriter 16/600 PS. More specifically, check the type to which "rp" is set. If "rp=text" and the printer is not working correctly, try "rp=raw", or visa-versa.

More in-depth information on setting up the `/etc/printcap` file can be found in the Tech Info Library article "LaserWriter 16/600 PS & Sun Solaris Through TCP/IP".

Support Information Services

Copyright 1995, Apple Computer, Inc.

Tech Info Library Article Number:17408