



# Tech Info Library

## Apple CD-ROM: Eject Button Disabled w/ Mounted Volumes (5/96)

Revised: 5/15/96  
Security: Everyone

Apple CD-ROM: Eject Button Disabled w/ Mounted Volumes (5/96)

=====

Article Created: 15 May 1996

TOPIC -----

My Macintosh computer has a built-in CD-ROM. When I press the eject button, the CD-ROM disc is not ejecting. Why?

DISCUSSION -----

When a CD-ROM disc is being used by the Mac OS, the disc is considered a mounted volume. The eject button is disabled on all mounted volumes. The correct procedure for ejecting a CD-ROM disc from the drive is the same as any mounted volume, either drag the disc icon to the trash, or use the Put Away command from the File Menu (cmd-Y).

Copyright 1996, Apple Computer, Inc.

Tech Info Library Article Number:19805