



Tech Info Library

StyleWriter Printers: Print Quality Depends On Paper (10/96)

Revised: 10/7/96
Security: Everyone

StyleWriter Printers: Print Quality Depends On Paper (10/96)

=====

Article Created: 7 October 1996

TOPIC -----

I have a StyleWriter and everytime I go to print the only quality option
avaialble in the print dialog is Best. The Normal and Draft options are dimmed.

DISCUSSION -----

You need to check the paper type setting. Unless you are printing on special
types of media, the paper type should be set for Plain. Some paper types such as
Transparency, Glossy, and Back Print Film require you to use the Best quality
mode.

Copyright 1996, Apple Computer, Inc.

Tech Info Library Article Number:20510